


6'X6' ANCHOR TRENCH

NOTES:

SLOPE SURFACE SHALL BE FREE OF
ROCKS AND CLODS.

MATS/BLANKET SHOULD BE INSTALLED
VERTICALLY DOWNSLOPE.

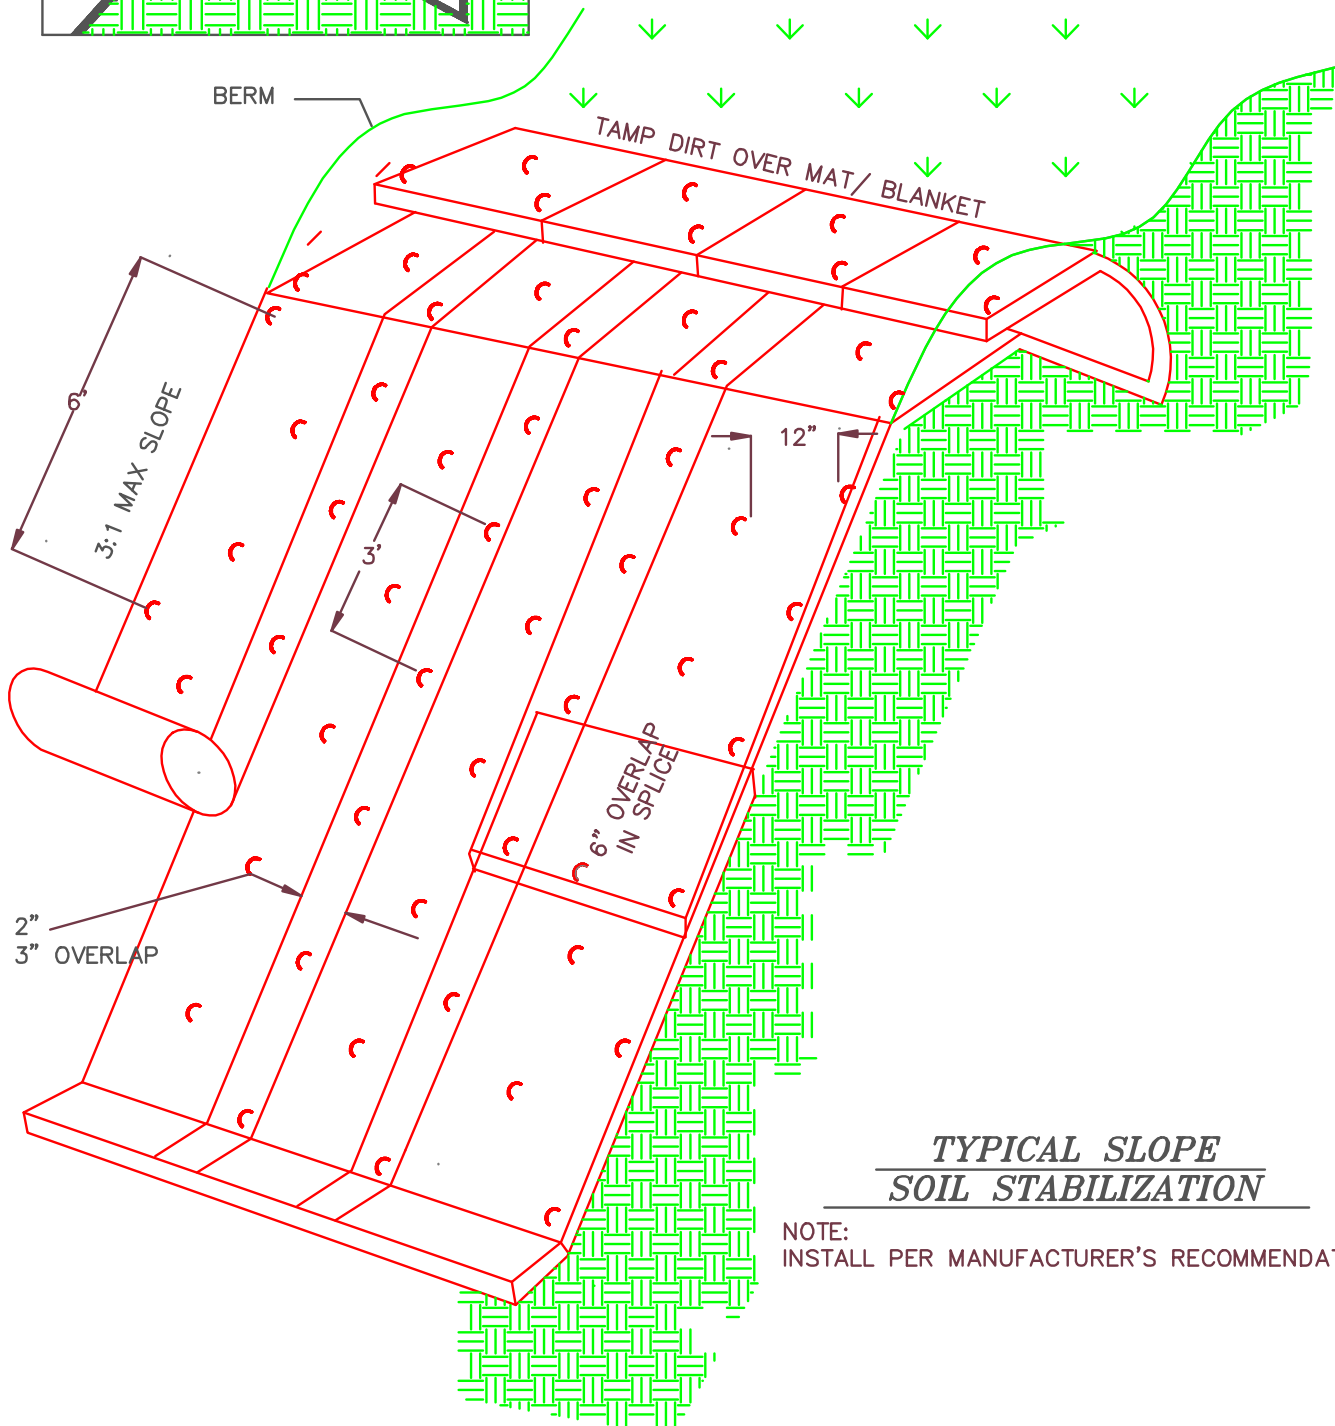

TYPICAL SLOPE SOIL STABILIZATION

NOTE:
INSTALL PER MANUFACTURER'S RECOMMENDATION

Modified from California Stormwater BMP Handbook

NTS

City of Springfield, Missouri



Department of Public Works
Storm Water Services Division

EROSION CONTROL BLANKETS

Figure: EC-10
Issued: 10-01-2008
Revised: